



RUGGED STEERING & SUSPENSION



RUGGED

STEERING AND SUSPENSION

BUILT TOUGH!



- Twin Tube construction.
- Nitrogen gas charged.
- 2WD shock absorbers and struts have a 30mm piston diameter and 12.5mm piston rod diameter.
- 4WD shock absorbers and struts have a 36mm piston diameter and 53mm body diameter.
- 4WD shock absorbers have a 15mm piston rod diameter.
- 4WD struts have an 18mm piston rod diameter.
- 0.125mm chrome plate thickness on all piston rods.
- NOK brand twin lip oil seals.



- Extensive test procedure throughout production.
- Endurance testing of every new part number to 4 million cycles.
- Batch test of all new material.
- Batch test of piston rods for hardness after chrome plating.
- Batch test of piston rods for smoothness.
- Batch test of piston rods under microscope for cracking.
- High low temperature test -40°C to 130 °C.
- Individual damping test.



| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Comp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|---|----------------------|------------------|---------------------|----------------------|----------------------------------|---|--------------------|-------------------|
| FORD | | | | | | | | |
| COURIER UTE PC 6/85 - 4/96, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| COURIER UTE PC 6/85 - 4/96, 4WD | REAR SHOCK ABSORBER | MBB-70020 | 609 | 376 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| COURIER UTE PC 6/85 - 4/96, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| COURIER UTE PD 5/96 - 12/98, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| COURIER UTE PD 5/96 - 12/98, 4WD | REAR SHOCK ABSORBER | MBB-70020 | 609 | 376 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| COURIER UTE PD 5/96 - 12/98, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| COURIER UTE PE 1/99 - 10/02, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| COURIER UTE PE 1/99 - 10/02, 4WD | REAR SHOCK ABSORBER | MBB-70020 | 609 | 376 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| COURIER UTE PE 1/99 - 10/02, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| COURIER UTE PG/PH 11/02 - 10/06, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| COURIER UTE PG/PH 11/02 - 10/06, 4WD | REAR SHOCK ABSORBER | MBT-70020 | 630 | 382 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| COURIER UTE PG/PH 11/02 - 10/06, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| ECONOVAN/MAXIVAN/SPECTRON/CAB CHASIS 5/84-8/99, SUITS ALL | FRONT SHOCK ABSORBER | MEA-71010 | 391 | 251 | 10.5mm stud | T bar bushed mount | 30 | 12.5 |
| ECONOVAN/MAXIVAN/SPECTRON/CAB CHASIS 5/84-8/99 WITH DUAL REAR WHEELS | REAR SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| ECONOVAN/MAXIVAN/SPECTRON/CAB CHASIS 5/84-8/99 WITH SINGLE REAR WHEELS (LIGHT DUTY) | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| ECONOVAN/MAXIVAN/SPECTRON/CAB CHASIS 5/84-8/99 WITH SINGLE REAR WHEELS, 1400 1/84-90 WITH DUAL REAR WHEELS (HEAVY DUTY) | REAR SHOCK ABSORBER | MEA-70021 | 568 | 350 | Bush eye 16mm id | Bush eye 16mm id | 36 | 15 |
| RANGER UTE PJ 12/06 - 3/09, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| RANGER UTE PJ 12/06 - 3/09, 2WD 2.5L | REAR SHOCK ABSORBER | MBT-70021 | 545 | 344 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 16mm id 48mm w | 36 | 15 |
| RANGER UTE PJ 12/06 - 3/09, 2/4WD 3.0L | REAR SHOCK ABSORBER | MBT-70020 | 630 | 382 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| RANGER UTE PK 4/09 - 9/11, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| RANGER UTE PK 4/09 - 9/11, 2WD 2.5L | REAR SHOCK ABSORBER | MBT-70021 | 545 | 344 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 16mm id 48mm w | 36 | 15 |
| RANGER UTE PK 4/09 - 9/11, 2/4WD 3.0L | REAR SHOCK ABSORBER | MBT-70020 | 630 | 382 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART NUMBER | Ext Length ± 3mm | Comp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|----------------------|------------------|---------------------|----------------------|----------------------------------|---|--------------------|-------------------|
| HOLDEN | | | | | | | | |
| COLORADO 2/4Dr UTILITY 6/08 -3/12, 4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| COLORADO 2/4Dr UTILITY 6/08 -3/12, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| FRONTERA 2Dr 10/95 - 12/98 | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| FRONTERA 2Dr 10/95 - 12/98 | REAR SHOCK ABSORBER | GJC-70020 | 540 | 349 | Bush eye w/sleeve 14mm id 40mm w | Bush eye w/sleeve 19mm id 44.5mm w | 36 | 15 |
| ISUZU D-MAX 2/4DR UTE/CAB CHASSIS 6/08-, 4WD (SHORTER EXTENSION) | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| ISUZU D-MAX 2/4DR UTE/CAB CHASSIS 6/08-, 4WD (LONGER EXTENSION) | FRONT SHOCK ABSORBER | GIB-70010 | 429 | 261 | 11mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| ISUZU D-MAX 2/4DR UTE/CAB CHASSIS 6/08-, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| JACKAROO UBS I / II WAGON 5/92 - 1/98 | FRONT SHOCK ABSORBER | GIB-70010 | 429 | 261 | 11mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| JACKAROO UBS I / II WAGON 5/92 - 1/98 | REAR SHOCK ABSORBER | GJC-70020 | 540 | 349 | Bush eye w/sleeve 14mm id 40mm w | Bush eye w/sleeve 19mm id 44.5mm w | 36 | 15 |
| JACKAROO UBS III WAGON 2/98 - 12/03 | FRONT SHOCK ABSORBER | GIB-70010 | 429 | 261 | 11mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| JACKAROO UBS III WAGON 2/98 - 12/03 | REAR SHOCK ABSORBER | GJC-70020 | 540 | 349 | Bush eye w/sleeve 14mm id 40mm w | Bush eye w/sleeve 19mm id 44.5mm w | 36 | 15 |
| RODEO TF G3/G6 SERIES UTE 7/88 - 12/97, 2WD | FRONT SHOCK ABSORBER | NNA-71010 | 337 | 251 | 10mm stud | Bush eye w/sleev 12mm id 32mm wide | 30 | 12.5 |
| RODEO TF G3/G6 SERIES UTE 7/88 - 12/97, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| RODEO TF G3/G6 SERIES UTE 7/88 - 12/97, 4WD | FRONT SHOCK ABSORBER | GIB-70010 | 429 | 261 | 11mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| RODEO TF G3/G6 SERIES UTE 7/88 - 12/97, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | #N/A | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| RODEO TF R7 SERIES UTE 11/96-11/02, 2WD | FRONT SHOCK ABSORBER | NNA-71010 | 337 | 251 | 10mm stud | Bush eye w/sleev 12mm id 32mm wide | 30 | 12.5 |
| RODEO TF R7 SERIES UTE 11/96-11/02, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| RODEO TF R7 SERIES UTE 11/96-11/02, 4WD | FRONT SHOCK ABSORBER | GIB-70010 | 429 | 261 | 11mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| RODEO TF R7 SERIES UTE 11/96-11/02, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| RODEO RA UTE 3/03-6/08, 4WD (SHORTER EXTENSION) | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| RODEO RA UTE 3/03-6/08, 4WD (LONGER EXTENSION) | FRONT SHOCK ABSORBER | GIB-70010 | 429 | 261 | 11mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| RODEO RA UTE 3/03-6/08, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |


| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Comp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|---|----------------------|------------------|---------------------|----------------------|----------------------------------|---|--------------------|-------------------|
| MAZDA | | | | | | | | |
| B SERIES UTE UF B2000 / B2200 / B2600 6/85 - 3/96, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| B SERIES UTE UF B2000 / B2200 / B2600 6/85 - 3/96, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| B SERIES UTE UF B2000 / B2200 / B2600 6/85 - 3/96, 4WD | REAR SHOCK ABSORBER | MBB-70020 | 609 | 376 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| B SERIES UTE UF B25/B2600 4/96 - 12/98, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| B SERIES UTE UF B25/B2600 4/96 - 12/98, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| B SERIES UTE UF B25/B2600 4/96 - 12/98, 4WD | REAR SHOCK ABSORBER | MBB-70020 | 609 | 376 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| B SERIES UTE UN B25/2600 1/99 - 10/02, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| B SERIES UTE UN B25/B2600 1/99 - 10/02, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| B SERIES UTE UN B25/B2600 1/99 - 10/02, 4WD | REAR SHOCK ABSORBER | MBB-70020 | 609 | 376 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| B SERIES UTE UN B25/B2600/B4000 10/02-10/06, 2/4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| B SERIES UTE UN B25/B2600/B4000 10/02-10/06, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| B SERIES UTE UN B2500 / B2600 / B4000 10/02-10/06, 4WD | REAR SHOCK ABSORBER | MBT-70020 | 630 | 382 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| BT-50 UTE / CREW CAB (DUAL CAB) / FREESTYLE (XTRA CAB) 11/06 - 10/11, 4WD | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| BT-50 UTE / CREW CAB (DUAL CAB) / FREESTYLE (XTRA CAB) 11/06 - 10/11, 2WD 2.5L | REAR SHOCK ABSORBER | MBT-70021 | 545 | 344 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 16mm id 48mm w | 36 | 15 |
| BT-50 UTE / CREW CAB (DUAL CAB) / FREESTYLE (XTRA CAB) 11/06 - 10/11, 2/4WD 3.0L | REAR SHOCK ABSORBER | MBT-70020 | 630 | 382 | Bush eye w/sleeve 20mm id 43mm w | Bush eye w/sleeve 12mm id 40mm w | 36 | 15 |
| E SERIES VAN 1/84 - 7/99, SUITS ALL | FRONT SHOCK ABSORBER | MEA-71010 | 391 | 251 | 10.5mm stud | T bar bushed mount | 30 | 12.5 |
| E SERIES VAN E1800/E2000/E2200 1/84 - 7/99 WITH DUAL REAR WHEELS | REAR SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| E SERIES VAN 1/84 - 7/99 WITH SINGLE REAR WHEELS (LIGHT DUTY) | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| E SERIES VAN E1800/E2000/E2200 1/84 - 7/99 WITH SINGLE REAR WHEELS, E1400 1/84-10/97 WITH DUAL REAR WHEELS (HEAVY DUTY) | REAR SHOCK ABSORBER | MEA-70021 | 568 | 251 | Bush eye 16mm id | Bush eye 16mm id | 36 | 15 |
| WE T SERIES 84 - 89 | REAR SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| WG T SERIES 89 - | REAR SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Comp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|---|----------------------|------------------|---------------------|----------------------|----------------------------------|---|--------------------|-------------------|
| MITSUBISHI | | | | | | | | |
| CANTER FE 1##/2## 79 - 85 | REAR SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| CANTER FE 3##/4## 86 - 95 | REAR SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| CHALLENGER PA I WAGON 12/97 - 5/00 | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| CHALLENGER PA II WAGON 6/00 - 1/06 | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| EXPRESS VAN L300 & STARWAGON SF /SG / SH / SJ 10/86 -, 2WD (LIGHT DUTY) | FRONT SHOCK ABSORBER | THC-71010 | 379 | 251 | 10mm stud | Bush eye w/sleeve 12mm id 32mm wide | 25 | 12.5 |
| EXPRESS VAN L300 & STARWAGON SF /SG / SH / SJ 10/86 -, 2WD (HEAVY DUTY) | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| EXPRESS VAN L300 & STARWAGON SF /SG / SH / SJ 10/86 -, 2WD | REAR SHOCK ABSORBER | CEB-71021 | 534 | 331 | Bush eye w/sleeve 16mm id 37mm w | Bush eye w/sleeve 16mm id 37mm w | 30 | 12.5 |
| EXPRESS VAN L300 & STARWAGON SF /SG / SH / SJ 10/86 -, 4WD (LIGHT DUTY) | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| EXPRESS VAN L300 & STARWAGON SF /SG / SH / SJ 10/86 -, 4WD (HEAVY DUTY) | FRONT SHOCK ABSORBER | CPA-70010 | 345 | 230 | 10mm stud | T bar bushed mount | 36 | 15 |
| EXPRESS VAN L300 & STARWAGON SF /SG / SH / SJ 10/86 -, 4WD | REAR SHOCK ABSORBER | CEB-71020 | 491 | 306 | Bush eye w/sleeve 12mm id 32mm w | 10mm stud | 30 | 12.5 |
| PAJERO WAGON NA/ NB/ NC/ ND/ NE/ NF/ NG 1/83 - 4/91 WITH REAR COIL OR LEAF SPRINGS | FRONT SHOCK ABSORBER | CPA-70010 | 345 | 230 | 10mm stud | T bar bushed mount | 36 | 15 |
| PAJERO WAGON NA/ NB/ NC/ ND/ NE/ NF/ NG 1/83 - 4/91 WITH REAR COIL SPRINGS | REAR SHOCK ABSORBER | CPA-70020 | 525 | 328 | Bush eye 16mm id 37mm w | Bush eye w/sleeve 16mm id 35mm w | 36 | 15 |
| PAJERO WAGON NA/ NB/ NC/ ND/ NE/ NF/ NG 1/83 - 4/91 WITH REAR LEAF SPRINGS | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| PAJERO WAGON NA/ NB/ NC/ ND/ NE/ NF/ NG 1/83 - 4/91 WITH MANUAL STEERING | STEERING DAMPER | CPB-73010 | 609 | 251 | | | | |
| PAJERO WAGON NH / NJ / NK 5/91 - 8/97 | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |



| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Comp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|---|----------------------|------------------|---------------------|----------------------|-------------------------|----------------------------------|--------------------|-------------------|
| mitsubishi | | | | | | | | |
| PAJERO WAGON NH / NJ / NK 5/91 - 8/97 WITH REAR LEAF SPRINGS | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| PAJERO WAGON NH / NJ / NK 5/91 - 8/97 WITH REAR COIL SPRINGS | REAR SHOCK ABSORBER | CPB-70021 | 495 | 312 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| PAJERO WAGON NH / NJ / NK 5/91 - 8/9 WITH MANUAL STEERING | STEERING DAMPER | CPB-73010 | 609 | 251 | | | | |
| PAJERO WAGON NL 9/97 - 4/00 | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | | |
| PAJERO WAGON NL 9/97 - 4/00 WITH REAR LEAF SPRINGS | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| PAJERO WAGON NL 9/97 - 4/00 WITH REAR COIL SPRINGS | REAR SHOCK ABSORBER | CPB-70021 | 495 | 312 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| PAJERO WAGON NL 9/97 - 4/00 WITH MANUAL STEERING | STEERING DAMPER | CPB-73010 | 609 | 251 | | | | |
| PAJERO WAGON NM 5/00 - 10/02 | FRONT STRUT | CPF-72010 | 470 | 325 | 10mm stud | Bush eye w/sleeve 14mm id 50mm w | 36 | 18 |
| PAJERO WAGON NM 5/00 - 10/02 | REAR SHOCK ABSORBER | CPF-70020 | 575 | 351 | 10mm stud | Bush eye w/sleeve 14mm id 48mm w | 36 | 15 |
| PAJERO WAGON NP 11/02 - 6/06 | FRONT STRUT | CPF-72010 | 470 | 325 | 10mm stud | Bush eye w/sleeve 14mm id 50mm w | 36 | 18 |
| PAJERO WAGON NP 11/02 - 6/06 | REAR SHOCK ABSORBER | CPF-70020 | 575 | 351 | 10mm stud | Bush eye w/sleeve 14mm id 48mm w | 36 | 15 |
| PAJERO WAGON NS / NT 4Dr 7/06 - & 2Dr 11/06 - | FRONT STRUT | CPF-72010 | 470 | 325 | 10mm stud | Bush eye w/sleeve 14mm id 50mm w | 36 | 18 |
| PAJERO WAGON NS / NT 4Dr 7/06 - & 2Dr 11/06 - | REAR SHOCK ABSORBER | CPF-70020 | 575 | 351 | 10mm stud | Bush eye w/sleeve 14mm id 48mm w | 36 | 15 |
| TRITON UTE ME / MF / MG / MH / MJ 10/86 - 9/96, 2WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| TRITON UTE ME / MF / MG / MH / MJ 10/86 - 9/96, 4WD | FRONT SHOCK ABSORBER | CPA-70010 | 345 | 230 | 10mm stud | T bar bushed mount | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Comp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|---|----------------------|------------------|---------------------|----------------------|----------------------------------|------------------------------------|--------------------|-------------------|
| mitsubishi | | | | | | | | |
| TRITON UTE ME / MF / MG / MH / MJ 10/86 - 9/96, 4WD | REAR SHOCK ABSORBER | CTC-70020 | 618 | 376 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| TRITON UTE ME / MF / MG / MH / MJ 10/86 - 9/96 WITH MANUAL STEERING, 4WD | STEERING DAMPER | CPB-73010 | 609 | 251 | | | | |
| TRITON UTE MK 10/96 - 6/06, 2WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| TRITON UTE MK 10/96 - 6/06, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| TRITON UTE MK 10/96 - 6/06, 4WD | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| TRITON UTE MK 10/96 - 6/06, 4WD | REAR SHOCK ABSORBER | CTC-70020 | 618 | 376 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| TRITON UTE MK 10/96 - 6/06 WITH MANUAL STEERING, 4WD | STEERING DAMPER | CPB-73010 | 609 | 251 | | | | |
| TRITON DUAL CAB/UTE ML/MN 7/06 -, 4WD | FRONT STRUT | CTD-72010 | 424 | 306 | 10mm stud | Bush eye w/sleeve 14.5mm id 50mm w | 36 | 18 |
| TRITON DUAL CAB/UTE ML/MN 7/06 -, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |

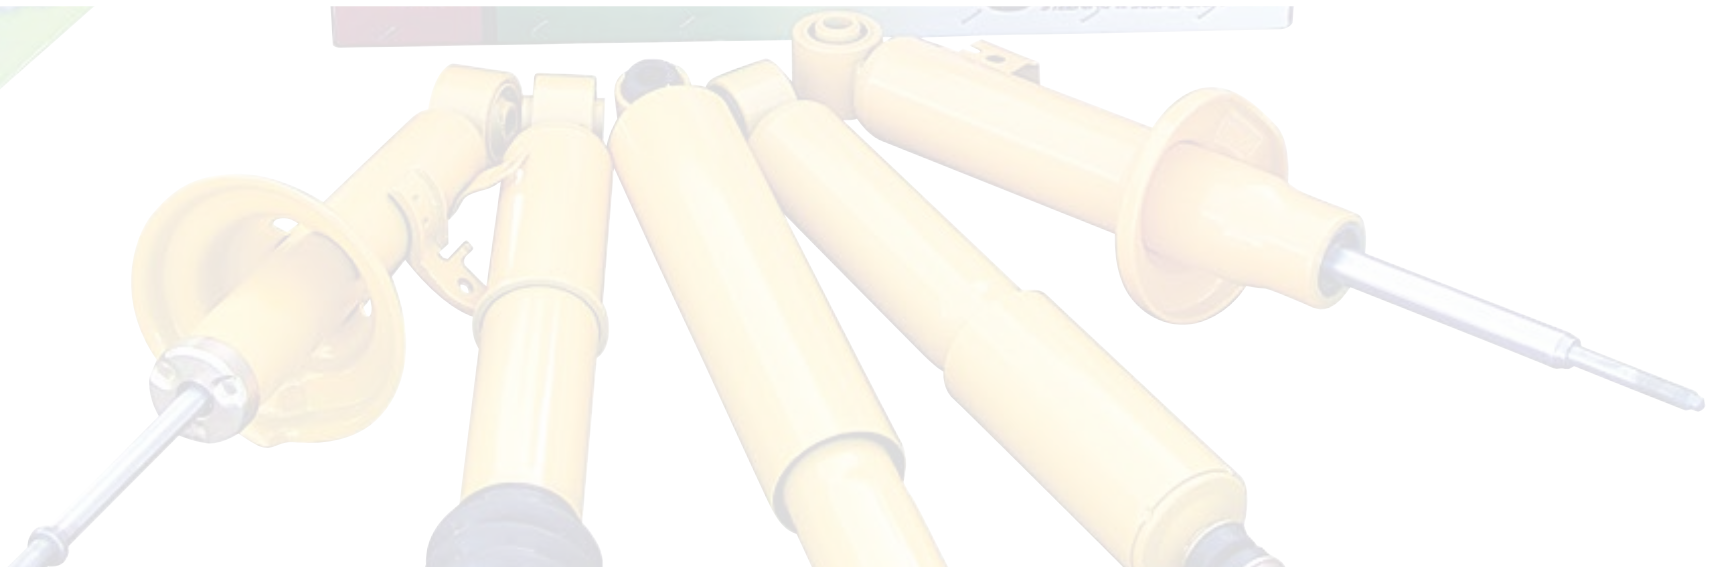

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|----------------------|------------------|---------------------|-----------------------|----------------------------------|---|--------------------|-------------------|
| NISSAN | | | | | | | | |
| NAVARA D21 UTE 1/86 - 5/92, 2WD | FRONT SHOCK ABSORBER | NNA-71010 | 337 | 251 | 10mm stud | Bush eye w/sleev 12mm id 32mm wide | 30 | 12.5 |
| NAVARA D21 KINGCAB UTE 1/86 - 5/92, 2WD | FRONT SHOCK ABSORBER | NNA-71010 | 337 | 251 | 10mm stud | Bush eye w/sleev 12mm id 32mm wide | 30 | 12.5 |
| NAVARA D21 UTE 1/86 - 5/92, 4WD | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| NAVARA D21 KINGCAB UTE 1/86 - 5/92, 4WD | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| NAVARA D21 UTE 1/86 - 5/92, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| NAVARA D21 UTE 3/92 - 2/97, 2WD | FRONT SHOCK ABSORBER | NNA-71010 | 337 | 251 | 10mm stud | Bush eye w/sleev 12mm id 32mm wide | | |
| NAVARA D21 UTE 3/92 - 2/97, 4WD | FRONT SHOCK ABSORBER | NNA-70010 | 351 | 235 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| NAVARA D21 UTE 3/92 - 2/97, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| NAVARA D22 UTE 2/97 - 10/01, 2WD | FRONT SHOCK ABSORBER | NNA-71010 | 337 | 251 | 10mm stud | Bush eye w/sleev 12mm id 32mm wide | 30 | 12.5 |
| NAVARA D22 UTE 2/97 - 10/01, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| NAVARA D22 UTE 2/97 - 10/01, 4WD | FRONT SHOCK ABSORBER | NND-70010 | 310 | 217 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| NAVARA D22 UTE 2/97 - 10/01, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| NAVARA D22 UTE 10/01-, 4WD | FRONT SHOCK ABSORBER | NND-70010 | 310 | 217 | 10mm stud | Bush eye w/sleeve 12mm id 32mm w | 36 | 15 |
| NAVARA D22 UTE 10/01-, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| NAVARA D40M UTE 5/05 - EURO TYPE VIN# WILL START WITH 'V', 4WD | FRONT STRUT | NNF-72010 | 387 | 286 | 12mm stud | Bush eye w/sleeve 14mm id 41mm w | 36 | 18 |
| NAVARA D40M UTE 5/05 - EURO TYPE VIN# WILL START WITH 'V', 4WD | REAR SHOCK ABSORBER | NNF-70020 | 588 | 356 | Bush eye 16mm id 37mm w | Bush eye w/sleeve 14mm id 41mm w | 36 | 15 |
| NAVARA D40T UTE 3/08 - THAI TYPE VIN# WILL START WITH 'M', 4WD | FRONT STRUT | NNF-72010 | 387 | 286 | 12mm stud | Bush eye w/sleeve 14mm id 41mm w | 36 | 18 |
| NAVARA D40T UTE 3/08 - THAI TYPE VIN# WILL START WITH 'M', 4WD | REAR SHOCK ABSORBER | NNF-70020 | 588 | 356 | Bush eye 16mm id 37mm w | Bush eye w/sleeve 14mm id 41mm w | 36 | 15 |
| PATHFINDER D21 WAGON 8/86 - 7/95 | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| PATHFINDER D21 WAGON 8/86 - 7/95 | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| PATROL MQ / MK / G160 PATROL 6/80-8/87, SUITS ALL BODIES | STEERING DAMPER | NGQ-73012 | 541 | 251 | | | | |
| PATROL GQ / Y60 CAB CHASSIS/UTE 8/87 - 10/97 WITH FRONT AND REAR LEAF SPRINGS | FRONT SHOCK ABSORBER | TLE-70020 | 536 | 332 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| PATROL GQ / Y60 WAGON 8/87 - 10/97 | FRONT SHOCK ABSORBER | TLB-70011 | 512 | 315 | 14mm stud | 14mm stud | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|----------------------|------------------|---------------------|-----------------------|-----------------------------|---|--------------------|-------------------|
| NISSAN | | | | | | | | |
| PATROL GQ / Y60 CAB CHASSIS 8/87 - 10/97 WITH REAR LEAF SPRINGS | REAR SHOCK ABSORBER | NGQ-70020 | 638 | 385 | Bush eye 19mm id comp fit | 10mm stud | 36 | 15 |
| PATROL GQ / Y60 WAGON 8/87 - 10/97 | REAR SHOCK ABSORBER | TLB-70022 | 655 | 400 | Bush eye 18.5mm id comp fit | Bush eye 18.5mm id comp fit | 36 | 15 |
| PATROL GQ / Y60 WAGON SWB & LWB 8/87 - 8/89 | STEERING DAMPER | NGQ-73010 | 577 | 251 | | | | |
| PATROL GQ / Y60 WAGON SWB & LWB 8/89 - 10/97 | STEERING DAMPER | NGQ-73011 | 487 | 251 | | | | |
| PATROL GQ / Y60 CAB CHASSIS/UTE 8/87 - 10/97 WITH FRONT AND REAR LEAF SPRINGS | STEERING DAMPER | NGQ-73012 | 541 | 251 | | | | |
| PATROL GU SERIES 10/97 - SUITS ALL BODIES | FRONT SHOCK ABSORBER | TLB-70011 | 512 | 315 | 14mm stud | 14mm stud | 36 | 15 |
| PATROL GU SERIES CAB CHASSIS/UTE 10/97 - WITH REAR LEAF SPRINGS | REAR SHOCK ABSORBER | NGQ-70020 | 638 | 385 | Bush eye 19mm id comp fit | 10mm stud | 36 | 15 |
| PATROL GU SERIES 10/97 - WITH FRONT AND REAR COIL SPRINGS, SUITS ALL BODIES | REAR SHOCK ABSORBER | TLB-70022 | 655 | 400 | Bush eye 18.5mm id comp fit | Bush eye 18.5mm id comp fit | 36 | 15 |
| PATROL GU SERIES WAGON 10/97 -3/00 CAB CHASSIS/UTE 12/98 - | STEERING DAMPER | NGR-73010 | 525 | 251 | | | | |
| PATROL GU SERIES WAGON 3/00 - | STEERING DAMPER | NGR-73011 | 550 | 251 | | | | |
| TERRANO WAGON R20 11/96 - 10/99 | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| TERRANO WAGON R20 11/96 - 10/99 | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |



| MAKE/MODEL | DESCRIPTION | PART NUMBER | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|----------------------|------------------|---------------------|-----------------------|-------------------------------------|---|--------------------|-------------------|
| TOYOTA | | | | | | | | |
| 4 RUNNER & SURF LN/RN/YN/VZV130 10/89 - 9/91 WITH INDEPENDENT FRONT SUSPENSION | FRONT SHOCK ABSORBER | TIH-70011 | 369 | 247 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| 4 RUNNER & SURF LN/RN/YN/VZV130 10/89 - 9/91 | REAR SHOCK ABSORBER | TLB-70010 | 578 | 350 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| 4 RUNNER & SURF LN/RN/YN/VZV130 10/89 - 9/91 | STEERING DAMPER | TIH-73010 | 613 | 251 | | | | |
| 4 RUNNER & SURF LN/RN/YN/VZV130 10/91 - 8/97 WITH INDEPENDENT FRONT SUSPENSION | FRONT SHOCK ABSORBER | TIH-70011 | 369 | 247 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| 4 RUNNER & SURF LN/RN/YN/VZV130 10/91 - 8/97 | REAR SHOCK ABSORBER | TLB-70010 | 578 | 350 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| 4 RUNNER & SURF LN/RN/YN/VZV130 10/91 - 8/97 | STEERING DAMPER | TIH-73010 | 613 | 251 | | | | |
| HIACE RZH / LH10# VAN 8/89 - 1/05 (LIGHT DUTY) | FRONT SHOCK ABSORBER | THC-71010 | 379 | 251 | 10mm stud | Bush eye w/sleeve 12mm id 32mm wide | 25 | 12.5 |
| HIACE RZH / LH10# VAN 8/89 - 1/05 (HEAVY DUTY) | FRONT SHOCK ABSORBER | MBT-70010 | 383 | 249 | 10mm stud | Bush eye 12mm id 32mm w w/2 x 3mm washers | 36 | 15 |
| HIACE RZH / LH10# VAN 8/89 - 1/05 | REAR SHOCK ABSORBER | THC-71020 | 510 | 251 | Bush eye w/sleeve 12mm id 38mm wide | Bush eye 19mm id 42mm wide | 30 | 12.5 |
| HIACE TRH / KDH / LWB / SLWB 20#/22# VAN 1/05 - | FRONT SHOCK ABSORBER | THC-71010 | 379 | 251 | 10mm stud | Bush eye w/sleeve 12mm id 32mm wide | 25 | 12.5 |
| HIACE TRH / KDH / LWB / SLWB 20#/22# VAN 1/05 - | REAR SHOCK ABSORBER | THD-71020 | 564 | 346 | Bush eye 16mm id 37mm w | Bush eye 19mm id 42mm w | 30 | 12.5 |
| HIACE SBV VAN 8/95 - 11/03 | FRONT SHOCK ABSORBER | THC-71010 | 379 | 251 | 10mm stud | Bush eye w/sleeve 12mm id 32mm wide | 25 | 12.5 |
| HIACE SBV VAN 8/95 - 11/03 | REAR SHOCK ABSORBER | THE-71020 | 328 | 251 | Bush eye 19mm id 42mm wide | 12mm stud | 30 | 12.5 |
| HILUX RN/YN/LN 3#/4# UTE 10/78 - 10/83, 4WD | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| HILUX RN/YN/LN 3#/4# UTE 10/78 - 10/83 WITH SOLID FRONT AXLE, 4WD | STEERING DAMPER | TIH-73011 | 540 | 251 | | | | |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88, 2WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|----------------------|------------------|---------------------|-----------------------|----------------------------------|----------------------------------|--------------------|-------------------|
| TOYOTA | | | | | | | | |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88 WITH SOLID FRONT AXLE, 4WD | FRONT SHOCK ABSORBER | TIH-70010 | 485 | 301 | 10mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88 WITH SOLID FRONT AXLE, 4WD | STEERING DAMPER | TIH-73011 | 540 | 251 | | | | |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88 WITH SOLID FRONT AXLE, 4WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88 WITH SOLID FRONT AXLE, 4WD | REAR SHOCK ABSORBER | TLB-70021 | 591 | 363 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |
| HILUX RN/YN/LN 5#/6# UTE 11/83 - 9/88 WITH SOLID FRONT AXLE, 4WD | STEERING DAMPER | TIH-73011 | 540 | 251 | | | | |
| HILUX RN/YN/LN 8#/9# UTE 10/88 - 9/97, 2WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| HILUX RN/YN/LN 8#/9# UTE 10/88 - 9/97, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| HILUX RN/YN/LN 10#/11# UTE 10/88 - 9/97 WITH SOLID FRONT AXLE, 4WD | FRONT SHOCK ABSORBER | TIH-70010 | 485 | 301 | 10mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| HILUX RN/YN/LN 10#/11# UTE 10/88 - 9/97 WITH INDEPENDENT FRONT SUSPENSION, 4WD | FRONT SHOCK ABSORBER | TIH-70011 | 369 | 247 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| HILUX RN/YN/LN 10#/11# UTE 10/88 - 9/97 WITH SOLID FRONT AXLE, 4WD | REAR SHOCK ABSORBER | TLB-70021 | 591 | 363 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |
| HILUX RN/YN/LN 10#/11# UTE 10/88 - 9/97 WITH INDEPENDENT FRON SUSPENSION, 4WD | REAR SHOCK ABSORBER | TLB-70020 | 629 | 387 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |
| HILUX RN/YN/LN 10#/11# UTE 10/88 - 9/97 WITH SOLID FRONT AXLE, 4WD | STEERING DAMPER | TIH-73011 | 540 | 251 | | | | |
| HILUX RN/YN/LN 10#/11# UTE 10/88 - 9/97 WITH INDEPENDENT FRONT SUSPENSION, 4WD | STEERING DAMPER | TIH-73010 | 613 | 251 | | | | |
| HILUX RZN/LN 14#/15# UTE 10/97 - 10/01, 2WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| HILUX RZN/LN 14#/15# UTE 10/97 - 10/01, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| HILUX RZN/LN 16#/17# UTE 10/97 - 10/01 WITH INDEPENDENT FRONT SUSPENSION, 4WD | FRONT SHOCK ABSORBER | TIH-70011 | 369 | 247 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| HILUX RZN/LN 16#/17# UTE 10/97 - 10/01 WITH INDEPENDENT FRONT SUSPENSION, 4WD | REAR SHOCK ABSORBER | TLB-70020 | 629 | 387 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART NUMBER | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|-----------------------------|--------------------|---------------------|-----------------------|----------------------------------|-------------------------------------|--------------------|-------------------|
| TOYOTA | | | | | | | | |
| HILUX RZN/LN 16#/17# UTE 10/97 - 10/01 WITH INDEPENDENT FRONT SUSPENSION, 4WD | STEERING DAMPER | TIH-73010 | 613 | 251 | | | | |
| HILUX RZN/LN 14#/15# UTE 11/01 - 2/05, 2WD | FRONT SHOCK ABSORBER | CTC-71010 | 355 | 237 | 10mm stud | T bar bushed mount | 30 | 12.5 |
| HILUX RZN/LN 14#/15# UTE 11/01 - 2/05, 2WD | REAR SHOCK ABSORBER | CTC-71020 | 575 | 355 | Bush eye w/sleeve 12mm id 37mm w | Bush eye 16mm id 37mm w | 30 | 12.5 |
| HILUX RZN/LN/VZN/KZN 16#/17# UTE 11/01 - 2/05 WITH INDEPENDENT FRONT SUSPENSION, 4WD | FRONT SHOCK ABSORBER | TIH-70011 | 369 | 247 | 10mm stud | Bush eye w/sleeve 16mm id 38mm w | 36 | 15 |
| HILUX RZN/LN/VZN/KZN 16#/17# UTE 11/01 - 2/05 WITH INDEPENDENT FRONT SUSPENSION, 4WD | REAR SHOCK ABSORBER | TLB-70020 | 629 | 387 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |
| HILUX RZN/LN/VZN/KZN 16#/17# UTE 11/01 - 2/05 WITH INDEPENDENT FRONT SUSPENSION, 4WD | STEERING DAMPER | TIH-73010 | 613 | 251 | | | | |
| HILUX, GGN15/GGN25/KUN26/KUN16/TGN16 UTE/XTRA CAB/DUAL CAB/TRD 2/05 - 5/11, 2WD | FRONT STRUT LEFT HAND SIDE | TIM-72031LH | 477 | 251 | 12mm stud | Bush eye w/sleeve 14mm id 39mm wide | 30 | 12.5 |
| HILUX, GGN15/GGN25/KUN26/KUN16/TGN16 UTE/XTRA CAB/DUAL CAB/TRD 2/05 - 5/11, 2WD | FRONT STRUT RIGHT HAND SIDE | TIM-72031RH | 477 | 251 | 12mm stud | Bush eye w/sleeve 14mm id 39mm wide | 30 | 12.5 |
| HILUX, GGN15/GGN25/KUN26/KUN16/TGN16 UTE/XTRA CAB/DUAL CAB/TRD 2/05 - 5/11, 4WD | FRONT STRUT | TIM-72010 | 542 | 409 | 12mm stud | Bush eye w/sleeve 14mm id 41mm w | 36 | 18 |
| HILUX, GGN15/GGN25/KUN26/KUN16/TGN16 UTE/XTRA CAB/DUAL CAB/TRD 2/05 - 5/11, 2WD | REAR SHOCK ABSORBER | TIM-71020 | 578 | 355 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 30 | 12.5 |
| HILUX, GGN15/GGN25/KUN26/KUN16/TGN16 UTE/XTRA CAB/DUAL CAB/TRD 2/05 - 5/11, 4WD | REAR SHOCK ABSORBER | TLB-70021 | 591 | 363 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER 40 SERIES UTE / TROOP CARRIER FJ/HJ/BJ 1960-11/84 | FRONT SHOCK ABSORBER | TL-70010 | 483 | 307 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| LANDCRUISER 40 SERIES UTE / TROOP CARRIER FJ/HJ/BJ 1960-11/84 | STEERING DAMPER | TL-73010 | 458 | 251 | | | | |
| LANDCRUISER 60 SERIES WAGON 8/80 - 1/90 | FRONT SHOCK ABSORBER | TLB-70010 | 578 | 350 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER 60 SERIES WAGON 8/80 - 1/90 | REAR SHOCK ABSORBER | NNA-70020 | 586 | 356 | Bush eye 16mm id 37mm w | Bush eye 16mm id 37mm w | 36 | 15 |
| LANDCRUISER 60 SERIES WAGON 8/80 - 1/90 | STEERING DAMPER | TLB-73010 | 648 | 251 | | | | |
| LANDCRUISER BUNDERA HZJ/PZJ70/73, BJ/FJ70/73/74 11/84 - 8/99 | REAR SHOCK ABSORBER | TLB-70021 | 591 | 363 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|----------------------|------------------|---------------------|-----------------------|-----------------------------|----------------------------------|--------------------|-------------------|
| TOYOTA | | | | | | | | |
| LANDCRUISER BUNDERA LJ/RJ7# 11/84 - 8/99 | REAR SHOCK ABSORBER | TIH-70010 | 485 | 301 | 10mm stud | Bush eye 12mm id 32mm w | 36 | 15 |
| LANDCRUISER 70 SERIES UTE/TROOP CARRIER 11/84 - 1/07 | TIE ROD END KIT(4PC) | TLB-70000 | N/A | N/A | N/A | N/A | N/A | N/A |
| LANDCRUISER 70 SERIES UTE/TROOP CARRIER (EXCLUDES BUNDERA) 11/84 - 8/99 | FRONT SHOCK ABSORBER | TLB-70010 | 578 | 350 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER 70 SERIES UTE/TROOP CARRIER 11/84 - 8/99 (EXCLUDES BUNDERA) | REAR SHOCK ABSORBER | TLB-70020 | 629 | 387 | Bush eye 19mm id comp fit | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER 70 SERIES UTE/TROOP CARRIER 8/99 - 1/07 | FRONT SHOCK ABSORBER | TLB-70011 | 512 | 315 | 14mm stud | 14mm stud | 36 | 15 |
| LANDCRUISER 70 SERIES UTE/TROOP CARRIER 8/99 - 1/07 | REAR SHOCK ABSORBER | TLB-70022 | 655 | 400 | Bush eye 18.5mm id comp fit | Bush eye 18.5mm id comp fit | 36 | 15 |
| LANDCRUISER 70 SERIES UTE/TROOP CARRIER 11/84 - 1/07 | STEERING DAMPER | TLB-73010 | 648 | 251 | | | | |
| LANDCRUISER 7# SERIES UTE/TROOP CARRIER & WAGON 4/07 - | FRONT SHOCK ABSORBER | TLB-70011 | 512 | 315 | 14mm stud | 14mm stud | 36 | 15 |
| LANDCRUISER 7# SERIES UTE/TROOP CARRIER & WAGON 4/07 - | REAR SHOCK ABSORBER | TLB-70022 | 655 | 400 | Bush eye 18.5mm id comp fit | Bush eye 18.5mm id comp fit | 36 | 15 |
| LANDCRUISER 7# SERIES UTE/TROOP CARRIER & WAGON 4/07 - | STEERING DAMPER | TLG-73010 | 748 | 251 | | | | |
| LANDCRUISER 80 SERIES WAGON 1/90 - 1/98 | FRONT SHOCK ABSORBER | TLC-70010 | 616 | 367 | 14mm stud | 14mm stud | 36 | 15 |
| LANDCRUISER 80 SERIES WAGON 1/90 - 1/98 | REAR SHOCK ABSORBER | TLC-70020 | 619 | 374 | 14mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER 80 SERIES WAGON 1/90 - 1/98 WITH SOLID FRONT AXLE | STEERING DAMPER | TLB-73010 | 648 | 251 | | | | |
| LANDCRUISER 100 SERIES WAGON 1/98 - 7/07 WITH SOLID FRONT AXLE | FRONT SHOCK ABSORBER | TLC-70010 | 616 | 367 | 14mm stud | 14mm stud | 36 | 15 |
| LANDCRUISER 100 SERIES WAGON 1/98 - 7/07 WITH INDEPENDENT FRONT SUSPENSION | FRONT SHOCK ABSORBER | TLF-70010 | 443 | 291 | 17mm stud | Bush eye w/sleeve 14mm id 40mm w | 36 | 15 |
| LANDCRUISER 100 SERIES WAGON 1/98 - 7/07 WITH SOLID FRONT AXLE | REAR SHOCK ABSORBER | TLC-70020 | 619 | 374 | 14mm stud | Bush eye 19mm id comp fit | 36 | 15 |

| MAKE/MODEL | DESCRIPTION | PART No# | Ext Length ± 3mm | Cwomp Length ± 3mm | Top mount | Bottom mount | Piston Dia (mm) | Shaft Dia (mm) |
|--|---------------------|------------------|---------------------|-----------------------|-----------|-------------------------------------|--------------------|-------------------|
| TOYOTA | | | | | | | | |
| LANDCRUISER 100 SERIES WAGON 1/98 - 7/07 WITH INDEPENDENT FRONT SUSPENSION | REAR SHOCK ABSORBER | TLF-70020 | 616 | 368 | 17mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER 100 SERIES WAGON 1/98 - 7/07 WITH SOLID FRONT AXLE | STEERING DAMPER | TLB-73010 | 648 | 251 | | | | |
| LANDCRUISER 200 SERIES WAGON 8/07 - | FRONT STRUT | TLJ-72010 | 591 | 425 | 18mm stud | Bush eye w/sleeve 16.5mm id 40mm w | 36 | 18 |
| LANDCRUISER 200 SERIES WAGON 8/07 - | REAR SHOCK ABSORBER | TLF-70020 | 616 | 368 | 17mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER PRADO 120 WAGON 9/02 - 7/09 | FRONT STRUT | TIM-72010 | 542 | 409 | 12mm stud | Bush eye w/sleeve 14mm id 41mm w | 36 | 18 |
| LANDCRUISER PRADO 120 WAGON 9/02 - 7/09 | REAR SHOCK ABSORBER | TLC-70020 | 619 | 374 | 14mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER PRADO 95 WAGON 4/96 - 9/02 | FRONT STRUT | TLE-72010 | 462 | 251 | 12mm stud | Bush eye w/sleeve 14mm id 40mm wide | 36 | 18 |
| LANDCRUISER PRADO 95 WAGON 4/96 - 9/02 | REAR SHOCK ABSORBER | TLE-70020 | 536 | 332 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |
| LANDCRUISER PRADO 95 WAGON 4/96 - 9/02 | REAR SHOCK ABSORBER | TLE-70020 | 536 | 332 | 10mm stud | Bush eye 19mm id comp fit | 36 | 15 |



Disclaimer and reservation of rights

© 2016 Auto Parts Group Pty Ltd is the owner of the copyright in this item. All rights reserved. No part of this work (including photos) may be reproduced or copied without the written permission of Auto Parts Group Pty Ltd. To the extent permissible at law, Auto Parts Group Pty Ltd is not liable to any person for loss or damage arising from reliance upon information contained herein. Parts are not genuine (unless specifically stated) and manufacturer references are for application purposes only. Only part numbers ending in 'G' are genuine parts. Auto Parts Group is not sponsored, approved, affiliated or otherwise associated with any genuine or original parts manufacturer, distributor or dealer. The statutory warranties/consumer guarantees under the Australian Consumer Laws and any other contractual warranties against defects are provided by Auto Parts Group only. Photos are for identification purposes only.



BRISBANE

72 Pritchard Road, Virginia, QLD, 4014
T: 07 3865 2599 F: 07 3865 3900
E: sales@autopartsgroup.com.au

TOWNSVILLE

T: 07 4426 1010 F: 07 4422 0347
E: sales@autopartsgroup.com.au

PERTH

T: 08 6500 0109 F: 08 6131 2949
E: salesperth@autopartsgroup.com.au

SYDNEY

2/338 Woodpark Road, Smithfield, NSW, 2164
T: 02 8785 4599 F: 02 9729 1188
E: sales@autopartsgroup.com.au

CANBERRA

T: 02 6185 3300 F: 02 6185 0331
E: sales@autopartsgroup.com.au

MELBOURNE

32-38 Winterton Road, Clayton, VIC, 3168
T: 03 9548 7109 F: 03 9548 7378
E: sales@autopartsgroup.com.au

NEWCASTLE

T: 02 4038 1407 F: 02 4040 9756
E: sales@autopartsgroup.com.au

ADELAIDE

60 Grand Junction Rd, Kilburn, SA 5084
T: 08 8125 9000 F: 08 8125 9009
E: sales@autopartsgroup.com.au

WOLLONGONG

T: 02 4207 3300 F: 02 4210 8775
E: sales@autopartsgroup.com.au